

BLENDER

WITH BOTTLE FOR FRUIT & VEGETABLE SMOOTHIES


ENGLISH

WELCOME


Thank you for choosing our blender. Before using the appliance and to ensure the best use, carefully read these instructions.

The safety precautions enclosed herein reduce the risk of death, injury and electrical shock when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and package. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident-prevention measures when using an electrical appliance. We assume no liability for customer failing to comply with these requirements.

COMPONENTS

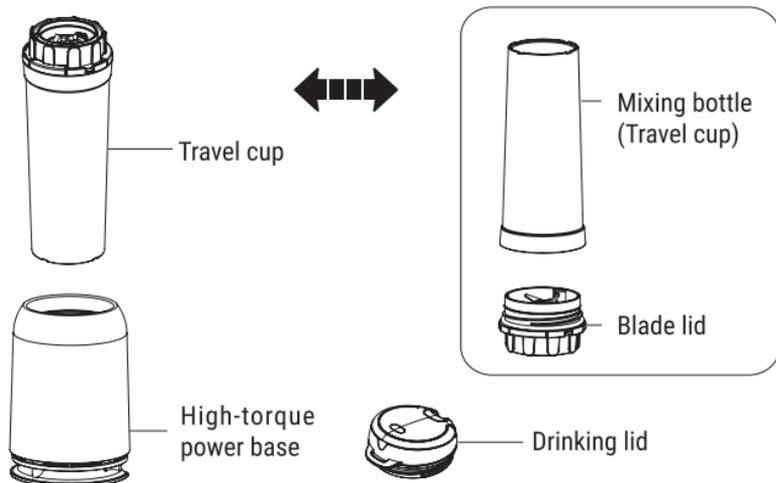

TRAVEL CUP USER GUIDE

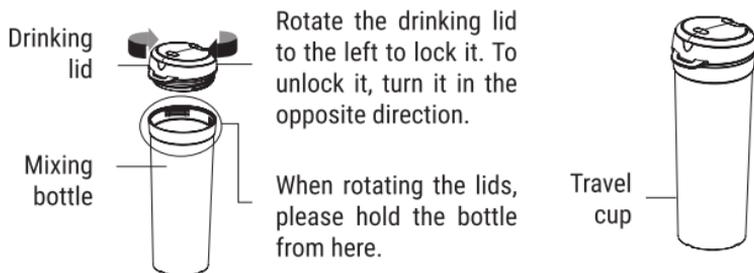

PRODUCT SPECIFICATIONS

Power Blender
230W/220-240V AC - 50/60Hz
20.000-24.000 RPM


OPERATION INSTRUCTIONS

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

Do not run the Power Base for longer than 1 minute. If more blending is needed, wait 1 minute, then repeat the blending process in 1-minute intervals up to 3 times as needed to achieve the desired consistency.

If more than three 1-minute blends are needed, allow the power base to cool for 2-3 minutes after the third session of blending beginning the next round.

1. Place the cup on a flat surface with the open end facing up. Fill the bottle with your favourite ingredients. Add the liquid of your choice up to the MAX line. (Liquid is required!).
2. Twist the Blade Lid onto the Cup and hand tighten to make sure the vessel has been sealed.
3. Turn the travel cup upside-down, place it in the base vertically. Then make sure the cup fits properly on the base.
4. Turn the blender on by pressing the travel cup down. The blender will stop once you stop pressing the cup down.
5. Turn the travel cup to the upright position and place it on a flat surface. Replace the blade lid with the drinking lid. You can now take the travel cup with you throughout the day to stay hydrated.

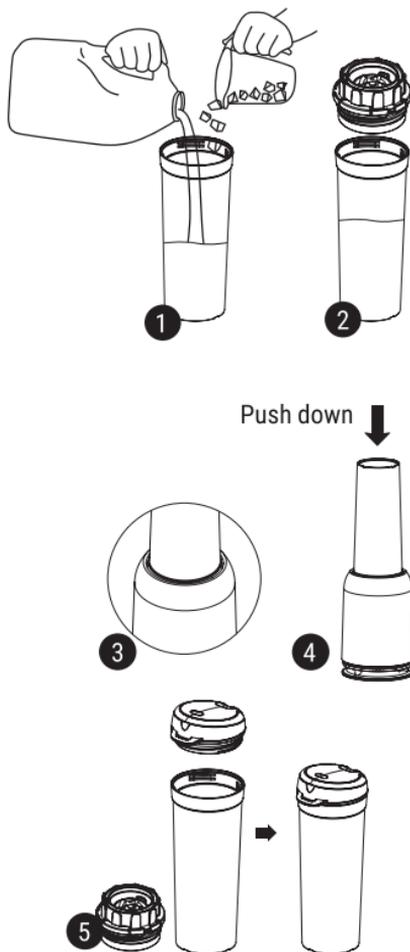

IMPORTANT SAFETY PRECAUTIONS

When using any electrical appliance, basic safety precautions should always be observed, including the following:

- Do not unplug appliances by pulling from the cord; instead grab hold of the plug and disconnect it from the electrical outlet.
- **Caution!** To avoid risk of electric shock, never immerse the cord, plug or power base of the blender in water or other liquids.
- Do not allow the cord to hang over the side of the counter or table.
- Do not allow the cord to touch hot surfaces, including the stove.
- Never leave the appliance unattended while in use.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Keep hands and utensils away from the precision blade while chopping or blending food to reduce the risk of severe personal injury or damage to the device.
- **Blades are sharp!** Handle with care.
- To avoid the risk of personal injury, never place the blade lid on the power base without having the cup properly attached.
- Do not attempt to bypass the interlock system that powers the unit on.
- Never blend hot liquids.
- Periodically inspect the cord and plug for damage. Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions or is dropped or damaged in any manner, discontinue use and contact Customer Service for assistance in obtaining a replacement.
- Do not use outdoors or for commercial purposes. This appliance is intended for household use only.
- Always operate the blender on a flat level surface.
- Unplug the blender when it is not in use. Make sure the power base is unplugged before assembling, disassembling, adding additional parts, or cleaning.
- The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or injury and will void the warranty.

POLARIZED PLUG INFORMATION ---

This appliance has a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will correctly fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way, as doing so will void the warranty.

You may use an extension cord, if necessary, but make sure you follow these guidelines:

- The extension cord must be placed in such a way that there is no risk of it getting twisted or of anyone accidentally pulling it or tripping over it.
- The cord must not hang over the side of the counter or table, nor should it come in contact with hot surfaces. Keep away from the reach of children.

This appliance comes with a thermal resettable fuse feature to prevent damage to the motor in the case of extreme overload. Should the unit shut off unexpectedly, unplug it and let it cool for at least 15 minutes before continuing.

Tip: After you've finished your drink, rinse out your travel cup and reuse it throughout the day for water or other cold liquids.

Note: For optimal performance we suggest starting with the fresh ingredients, then the frozen ones (greens and fruits). Add nuts, seeds, or other protein powder. Finally, load your liquids to the MAX line.

BLENDING TIPS ---

You must always add a liquid before you blend your drink.

Cut all firm fruits and vegetables into pieces no larger than 0,70" (1.8cm) to 1 inch (2.5cm).

Don't overload the travel cup. If the motor stalls, turn the blender off immediately, unplug the unit and let it cool for at least 15 minutes. Then, remove a portion of the food and continue.

This blender will not mash potatoes, whip egg whites or substitute dairy products, knead dough or grind raw meat.

CLEANING AND STORING YOUR BLENDER

IMPORTANT: UNPLUG THE UNIT AND USE CAUTION DURING CLEANING. DO NOT IMMERSE THE POWER BASE IN WATER OR ANY OTHER LIQUIDS.

Use a damp soft cloth, rag or sponge to wipe down the inside and outside of the Power Base. Wash the rest of the parts in warm, soapy water. Rinse properly and dry.

All parts, except for the Power Base, are dishwasher-safe.

After cleaning, put the blade lid on the travel cup and place it in the blender. Put it away along with the drinking lid.

CIRCUIT DIAGRAM



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material resources. To return your used device, please use the return and collection systems or contact the retailer from where the product was purchased. They can take this product for environmental safe recycling.



Imported by Direlec Group S.L. - B98611643
Avenida del Carme, 2 - 46715 L'Alquería de la Comtessa - Valencia - SPAIN

Made in P.R.C.